

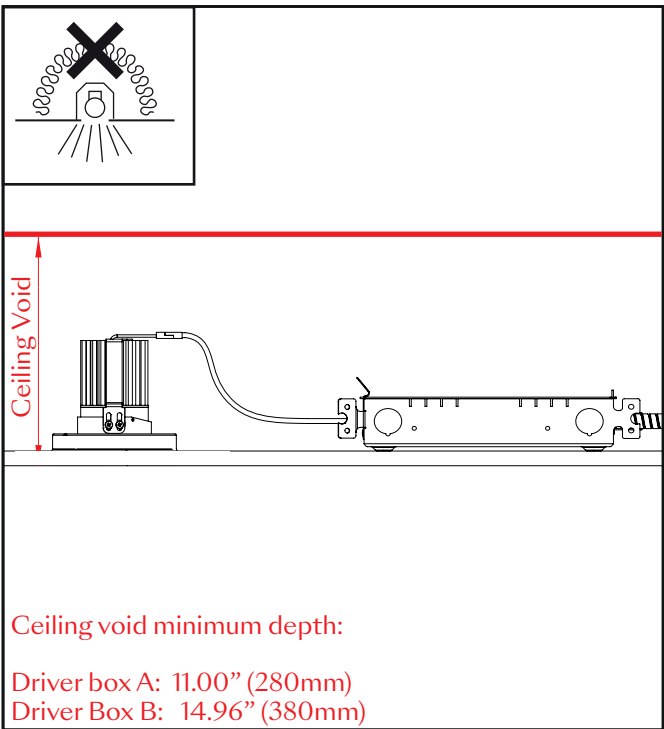


# Installation Instructions- EasyFit Edge4.25 Trimless


For Edge4.25 Fixed, Adjustable and Wallwash trimless

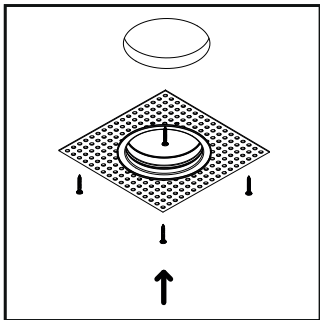


Do not cover any element of the installation with insulation material.

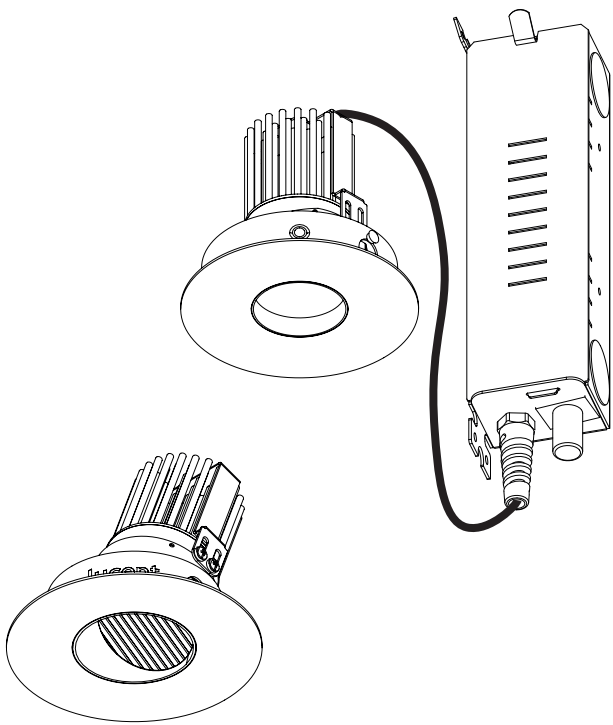


1. Cut out hole in ceiling and insert installation kit.  
Cutout size Ø3.23" (Ø82mm)

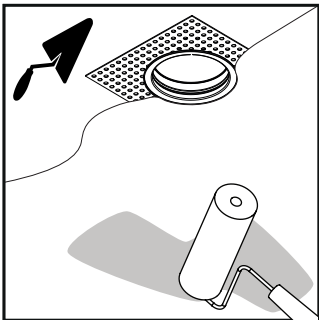


2. Plaster-in the TL kit and finish the ceiling.

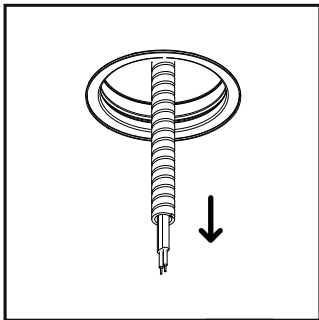


3. Bring through main power connection

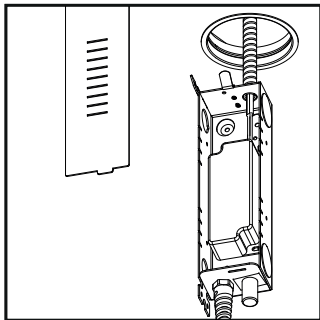


4. Remove Lid on Easyfit box to access driver. Connect driver to mains power.

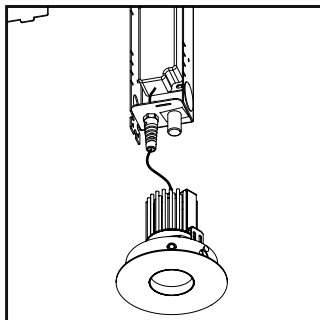


5. Make connection with driver.

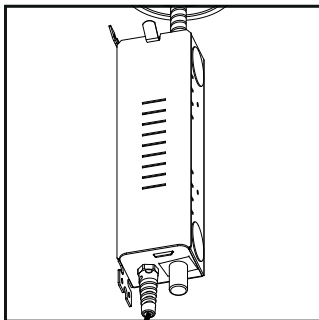

6. Replace lid on Easyfit box.

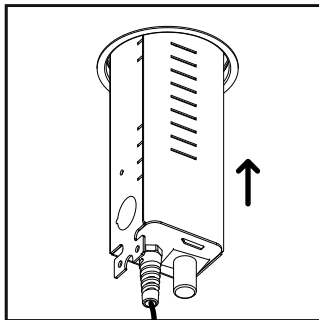

7. Pass Easyfit box through installation kit.

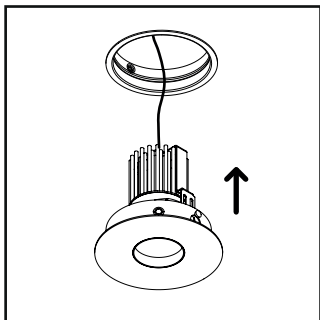

8. Insert fitting into installation kit.