


## MiniTrim Round Installation Instructions

MiniTrim Round  
860/863-SQ-LED

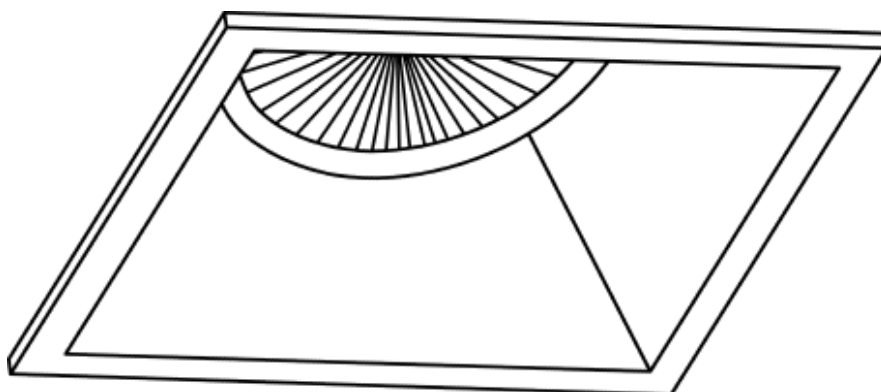

IP20


IP44

Fixed Only

IP65

Fixed Only

 Ta  
≤25°C



## Technical Parameters

LED Module	Drive Current	Typ. forward volt	Mod. Power
LED51/3	350mA max	36VDC	12.6W max
LED51/Q- HE	200mA max	33VDC	8.0W max
LED51/Q- HO	350mA max	34VDC	14e.0W max
LED51/3-SS	1000mA max	11.5VDC	11.5W max
LED51/3-WD	350mA max	36VDC	12.6W max

### Note:

The recommended cable distance between the remote driver and the light source is 2 meters for most driver types. If distances greater than this are required please contact Lucent Lighting for alternative solutions.




## IMPORTANT INFORMATION


- Please read the following instructions carefully.
- Follow all national and local wiring and safety regulations.
- Connecting or disconnecting these luminaires while powered will damage the LED.
- Do not touch the LED or PCB.
- These products are designed for interior use only and only for downlighting applications.
- Optimal ambient temperature ≤ 25°C, operating range of components -20°C - +40°C.
- These products should only be installed by a qualified electrician.
- Lucent LED downlights light source is non user replaceable.
- Lucent LED downlights should only be replaced by a qualified person, the manufacturer or a similar qualified person.
- These products require an LED driver - DO NOT CONNECT DIRECTLY TO MAINS POWER!
- The fixing method is designed to hold the weight of the luminaire only.
- The top and bottom of the luminaire provides essential heat dissipation for the light source and must not be covered.
- The manufacturer bears no liability for damage caused by inappropriate use or application.
- Retain these instructions for future reference.

## Product information

### MiniTrim Fixed

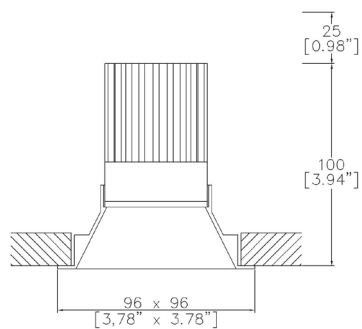

### MiniTrim Accent

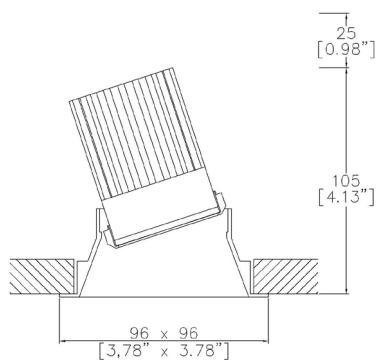


## Installation Steps




**TURN POWER OFF BEFORE INSPECTION, INSTALLATION OR REMOVAL!**


### MiniTrim Installation

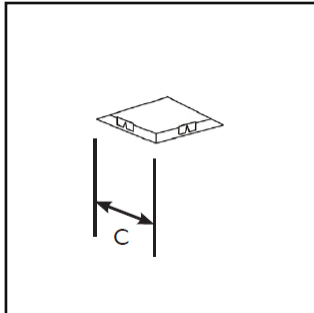


1. Create cutout C= 81 x 81mm

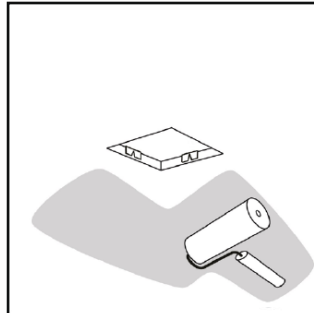


2. Finish ceiling face

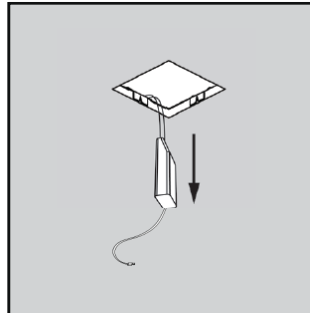


3. LED driver dropdown

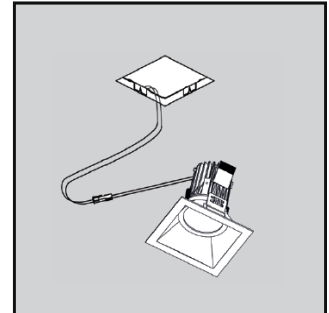

4. LED Driver connection and re-installation

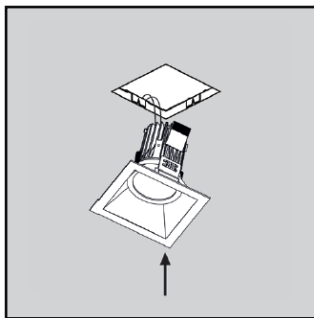


5. Carefully raise the springs to allow fixture to pass through the cutout. Once in position the tension of the springs will hold the luminaire

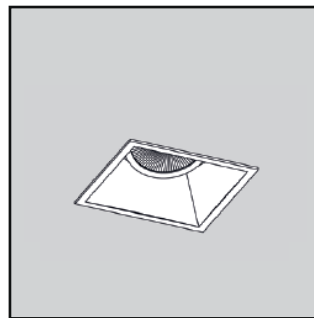


6. Finish Installation


### MiniTrim Adjustment

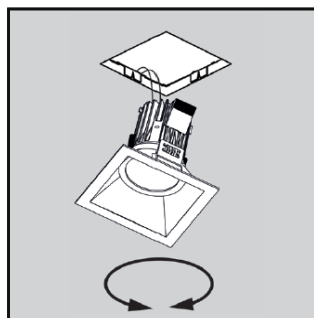

1. Adjust rotation before installing fitting into cutout, in 90° increments.

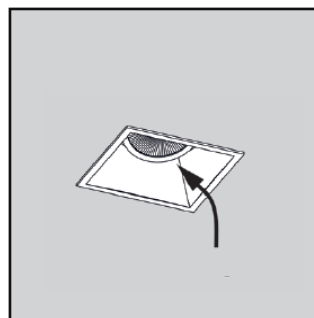


2. Adjust tilt.

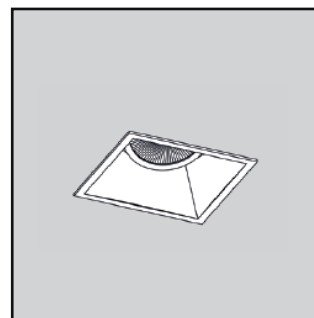


3. Finished

## ⚠ Servicing LED modules


LUCENT LED MODULES ARE **NON-USER** REPLACEABLE. LED MODULES SHOULD ONLY BE REPLACED BY A QUALIFIED PERSON, THE MANUFACTURER OR A SIMILAR QUALIFIED PERSON.

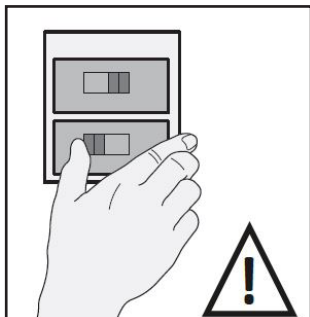


1. Switch off mains power.

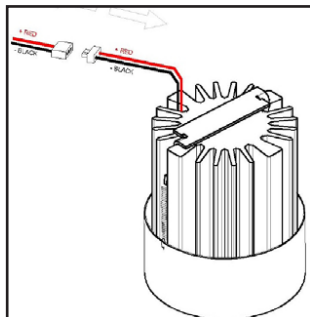

2. Disconnect LED module from the driver.

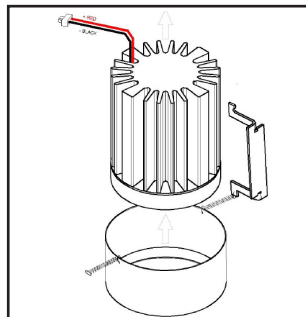

3. Take off the fixing brace to free the LED module and remove it

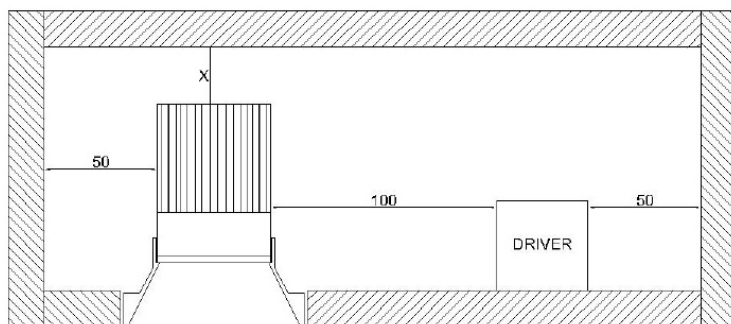

### NOTES:

Leave the minimum distance detailed above around the luminaire and driver:

For LED35 modules X= min. 15mm

For LED51 modules X= min. 25mm


For LED71 modules X= min. 25mm

\*some driver and fitting combinations may require a bigger recess depth to install driver




**TURN POWER OFF BEFORE INSPECTION, INSTALLATION OR REMOVAL!**

## Remote Driver Wiring

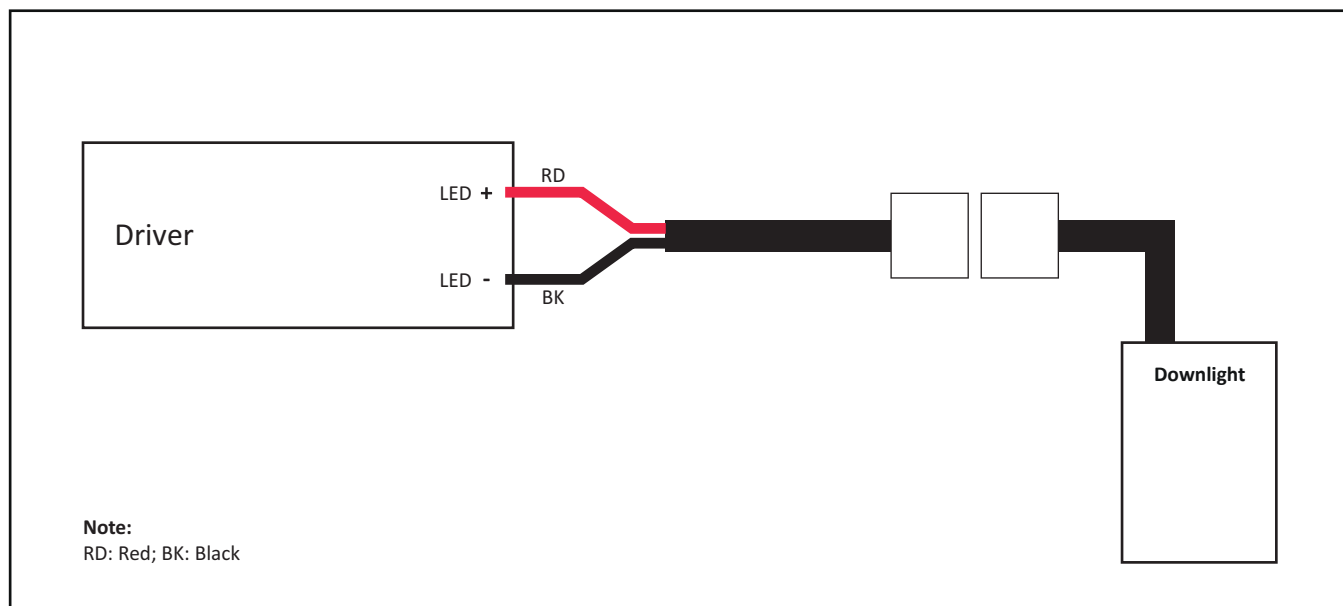

## Tuneable White Remote Driver Wiring

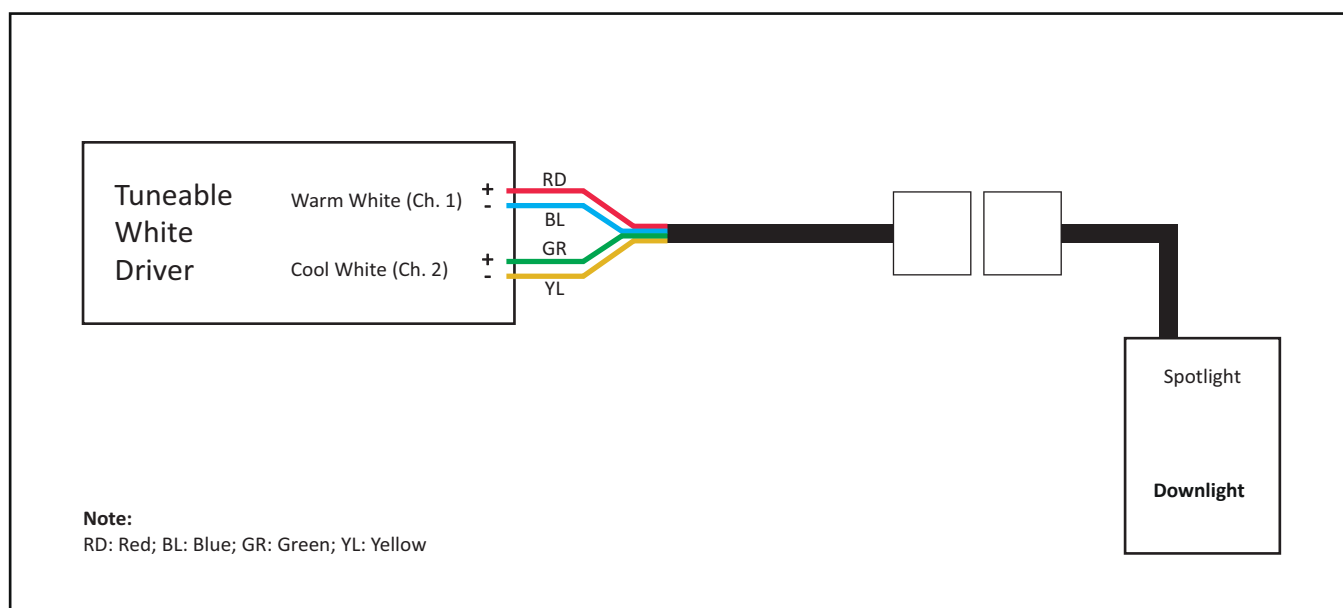

**ALL LED DRIVERS SUPPLIED BY LUCENT WILL BE PRE-WIRED WITH A LEAD THAT HAS THE CORRECT CONNECTOR TO MATCH THE LED MODULE USED. IF CONNECTORS ARE REMOVED, WARRANTY WILL BE VOID. IF THE DRIVER NEEDS TO BE REPLACED, OR CABLES EXTENDED REFER TO FOLLOWING WIRING DIAGRAMS.**



**TURN POWER OFF BEFORE INSPECTION, INSTALLATION OR REMOVAL!**