



Installation Instructions


For IG40-DL, IG40-DL-SQ, IG60-DL, IG60-DL-SQ and IG60-7-DL

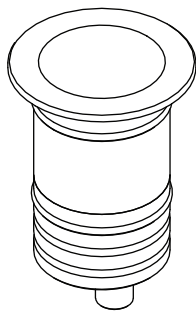


IG40 Downlight Round -
IG40-DL-XX-XXX-XX-XX

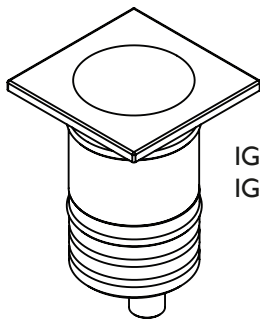

IG40 Downlight Square -
IG40-DL-SQ-XX-XXX-XX-XX

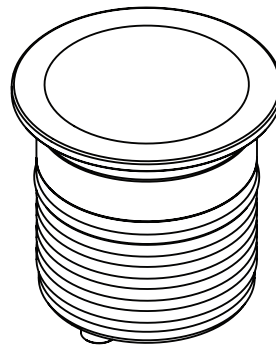


IG60 Downlight Round -
IG60-DL-XX-XXX-XX-XX

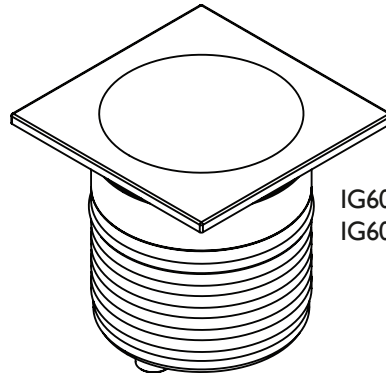


IG60 Angle Downlight -
IG60-7-DL-XX-XXX-XX-XX


IG60 Downlight Square -
IG60-DL-SQ-XX-XXX-XX-XX

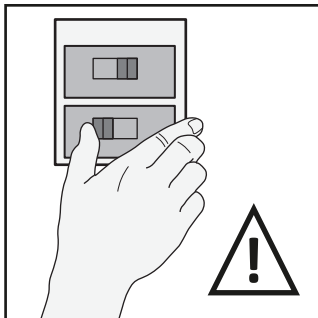


Switch off mains power before installation.

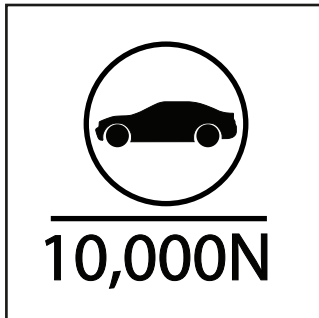


Maximum static load for these products is 10,000N or 1000kg.

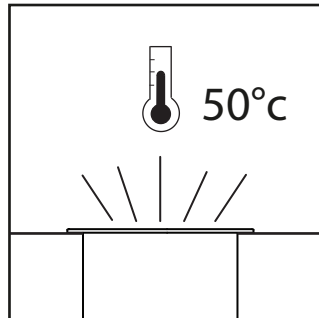


Maximum glass surface temperature 50°C

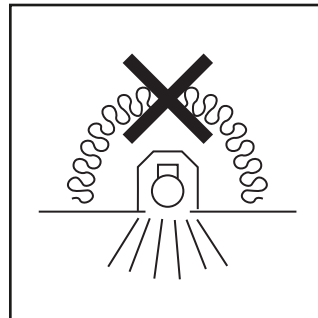

Do not cover luminaire with insulation material.

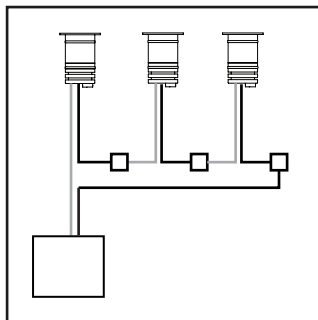

Products must be series wired. See page 8 for instructions.

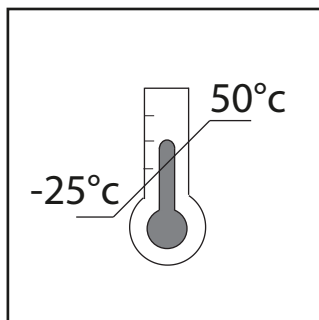


Max ambient temperature 50°C,
Min ambient temperature -25°C.


- Please read the following instructions carefully.
 - Follow all national and local wiring and safety regulations.
- Connecting or disconnecting these luminaires while powered will damage the LED.
- These products should only be installed by a qualified electrician.
- The light source contained in these luminaires shall only be replaced by the manufacturer, their service agent or a similarly qualified person.
- These products require an LED driver - **DO NOT CONNECT DIRECTLY TO MAINS POWER!**
 - Retain these instructions for future reference.

Installation Instructions for ceiling


For IG40-DL, IG40-DL-SQ, IG60-DL, IG60-DL-SQ and IG60-7-DL

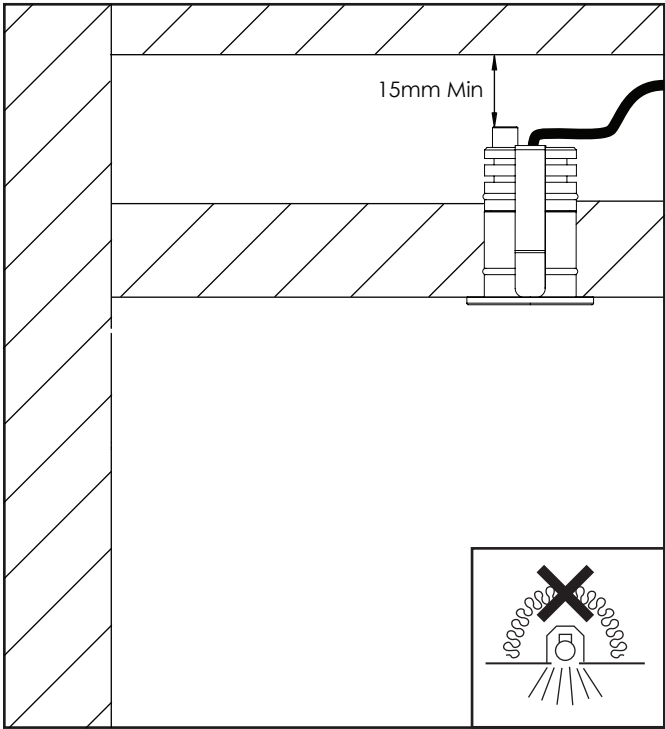


Ceiling mounting with springs. Do not cover fixture with insulation material.

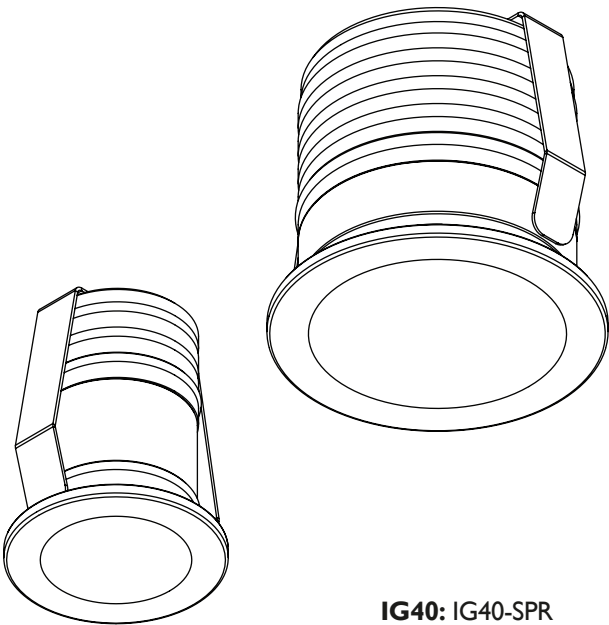


IG40: IG40-SPR
IG60: IG60-SPR

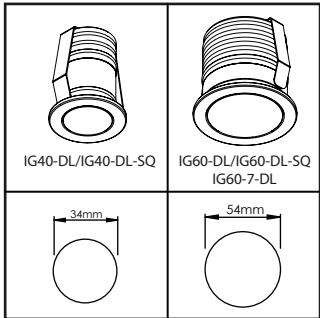


1. InGround springs cutout size.

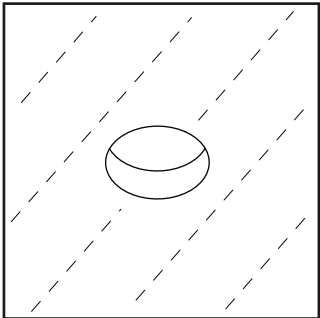


2. Prepare cut-out in surface.

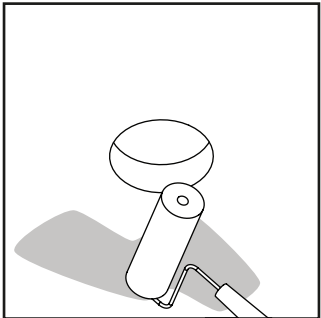


3. Finish surface.

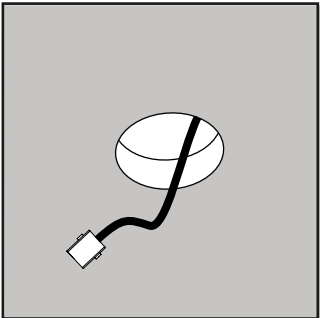


4. Drop down power supply cable.

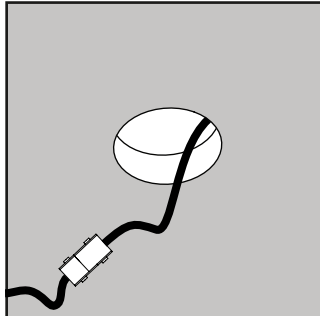

5. Connect fitting to driver.

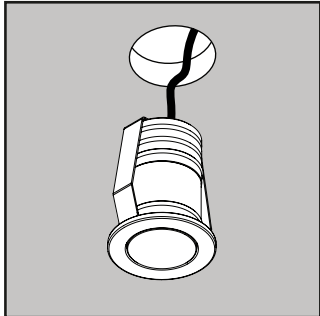

6. Push fitting into the cut-out. The springs will hold it securely in place.

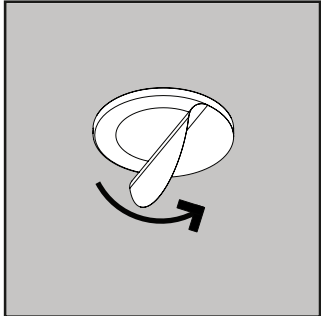

7. Remove protective film before use.