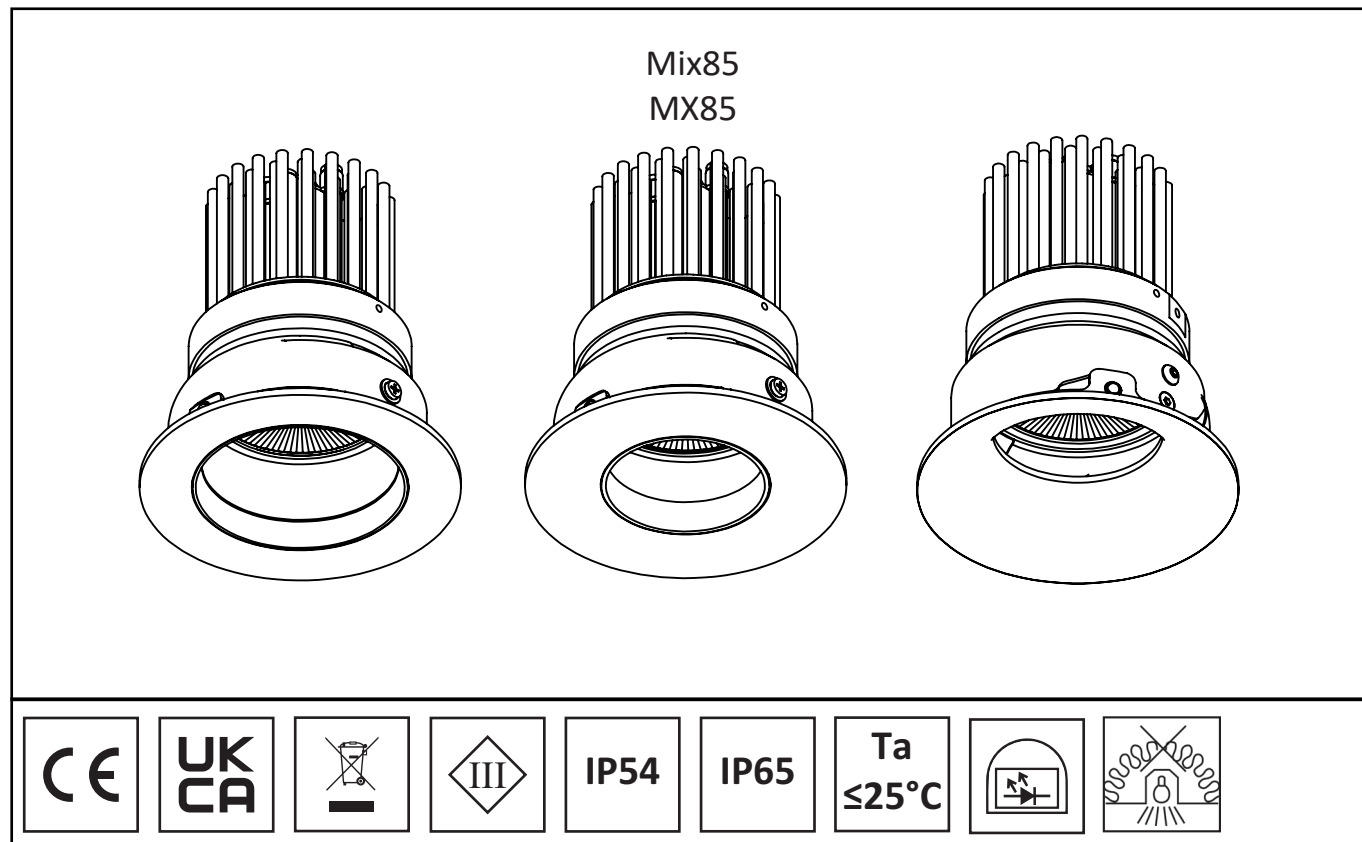


Mix85**Installation Instructions****Technical Parameters**

LED Module	Drive Current	Typ. forward volt	Mod. Power
LED51/3	350mA max	36VDC	12.6W max
LED51/Q-HE	200mA max	33VDC	8.0W max
LED51/Q-HO	350mA max	34VDC	14.0W max
LED51/3-SS	1000mA max	11.5VDC	11.5W max
LED51/3-WD	350mA max	34VDC	11.9W max
LED51/3-TW	350mA max	36VDC	12.6W max

Note:


The recommended cable distance between the remote driver and the light source is 2 meters for most driver types. If distances greater than this are required please contact Lucent Lighting for alternative solutions.

**IMPORTANT INFORMATION**

- Please read the following instructions carefully.
- Follow all national and local wiring and safety regulations.
- Connecting or disconnecting these luminaires while powered will damage the LED.
- Do not touch the LED or PCB.
- These products are designed for interior use only and only for downlighting applications.
- Optimal ambient temperature ≤ 25°C, operating range of components -20°C - +40°C.
- These products should only be installed by a qualified electrician.
- Lucent LED downlights light source is non user replaceable.
- Lucent LED downlights should only be replaced by a qualified person, the manufacturer or a similar qualified person.
- These products require an LED driver - DO NOT CONNECT DIRECTLY TO MAINS POWER!
- The fixing method is designed to hold the weight of the luminaire only.
- The top and bottom of the luminaire provides essential heat dissipation for the light source and must not be covered.
- The manufacturer bears no liability for damage caused by inappropriate use or application.
- Retain these instructions for future reference.


Product information

Mix85 Trim

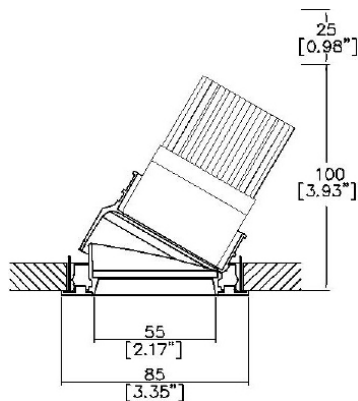


Mix85 with Trim Kit TR1


Mix85 Trimless

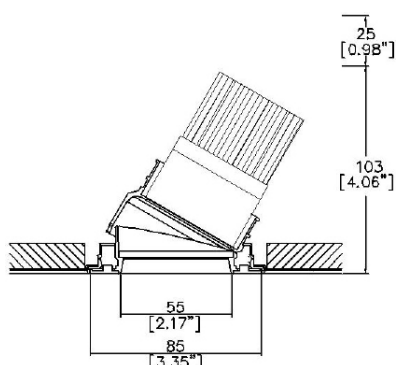

Mix85 with Trimless
Kit TL1 (front fitting, full
skim)

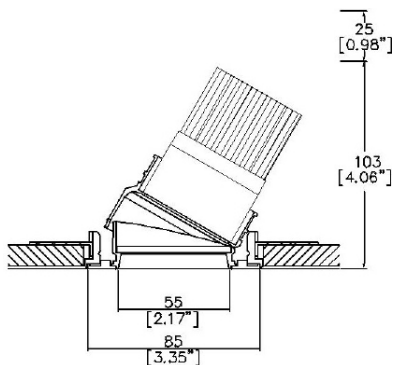

Mix85 with Trimless Kit
TL2 (rear fitting, partial
skim)

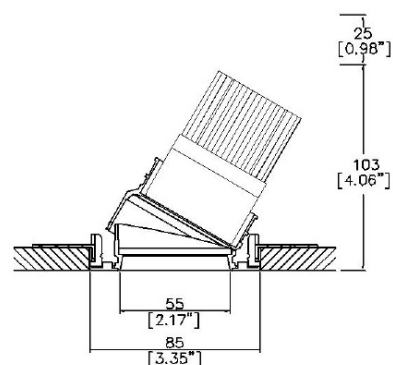


Mix85 with Trimless
Appearance Kit TL3 (rear
fitting, solid ceiling)

Installation Steps




TURN POWER OFF BEFORE INSPECTION, INSTALLATION OR REMOVAL AND PROPERLY GROUND ELECTRICAL ENCLOSURE!


Mix85 Trim TR1 Installation

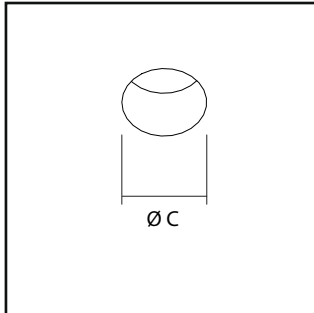


1. Create cutout C=Ø79mm

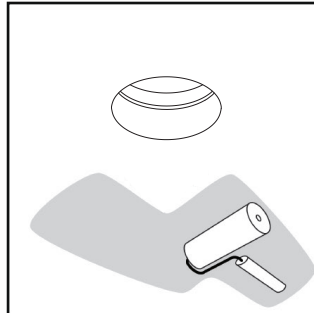


2. Finish ceiling face

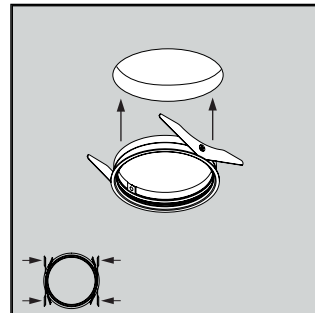


3. Trim kit installation. Fold springs back while inserting the fitting

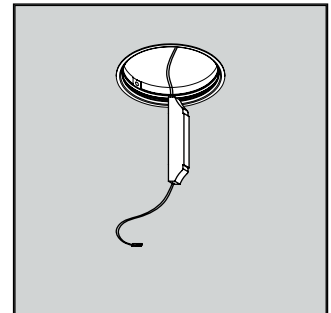


4. LED driver dropdown

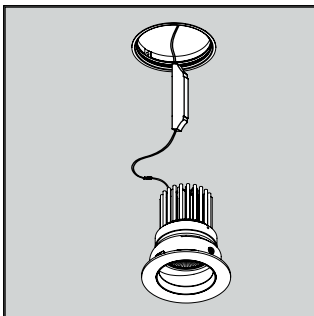


5. Fixture wiring connection

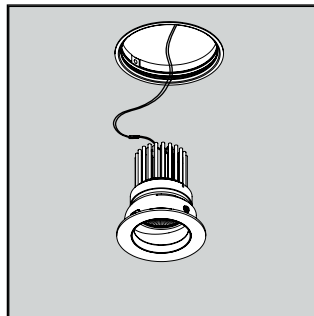


6. LED Driver re-installation

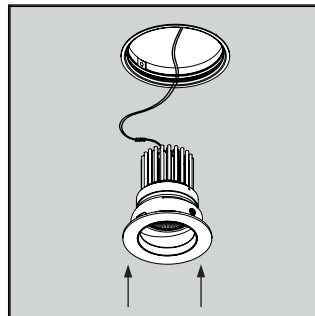

7. Insert luminaire body and ensure ball-catches are fully engaged

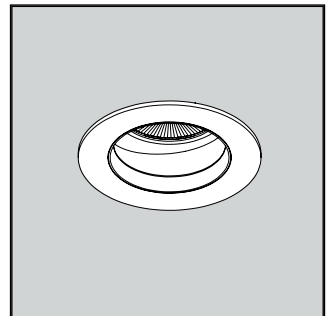

8. Adjust fitting as desired

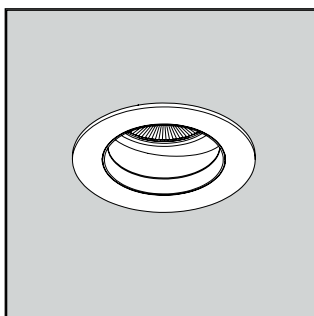


9. Finished Installation

Installation Steps




TURN POWER OFF BEFORE INSPECTION, INSTALLATION OR REMOVAL AND PROPERLY GROUND ELECTRICAL ENCLOSURE!


Mix85 Trimless Kit TL1 Full Skim Installation

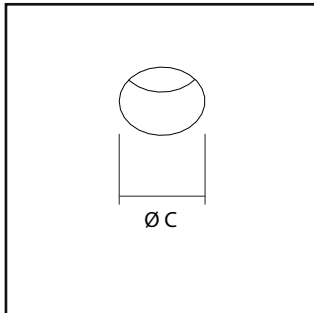


1. Create cutout C=Ø90mm

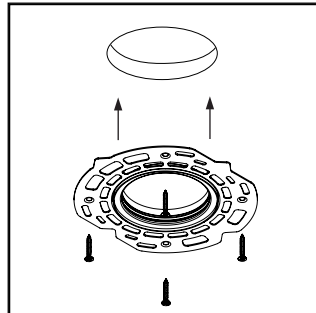


2. Trimless kit installation

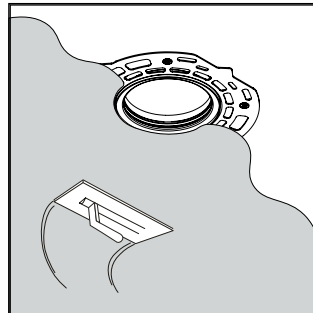


3. Finish ceiling face

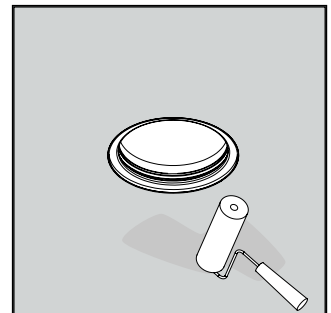


4. Paint and allow to dry fully

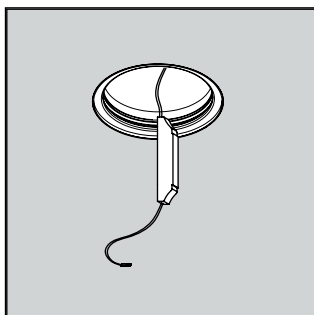


5. LED driver dropdown

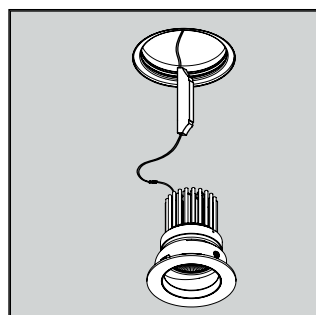


6. Fixture wiring connection

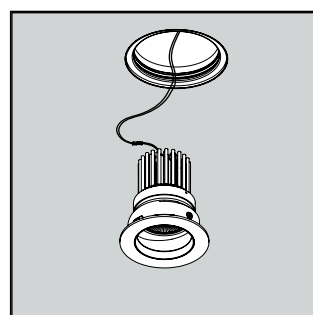


7. LED Driver re-installation

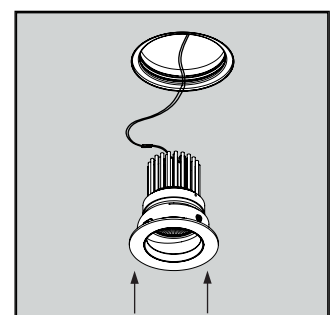

8. Insert luminaires module body and ensure ball-catches are fully engaged


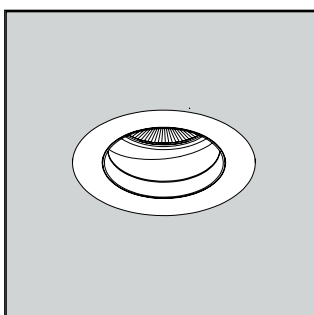


9. Adjust fitting as desired

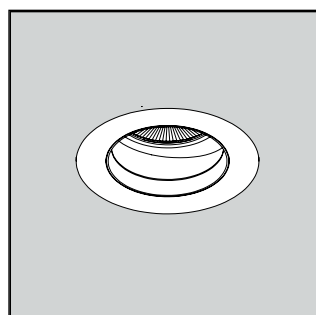

10. Finished Installation

Kit spacing

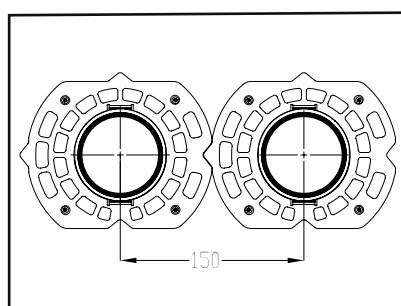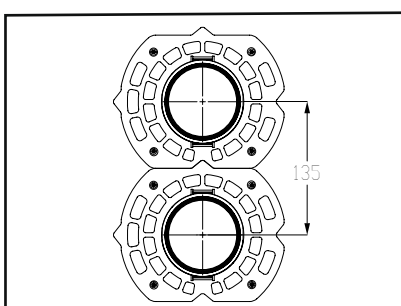

NOTES:


Plaster frame can be used as a guide for spacing downlights. Please note, 135mm is the minimum distance allowed between Mix85 fittings.

Installation Steps




TURN POWER OFF BEFORE INSPECTION, INSTALLATION OR REMOVAL AND PROPERLY GROUND ELECTRICAL ENCLOSURE!


Mix85 Trimless TL2 Partial Skim Installation

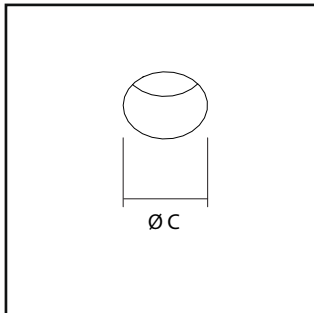


1. Create cutout C=Ø89mm

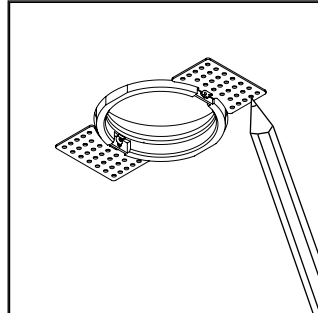


2. Position the bracket on the ceiling and mark the screw holes

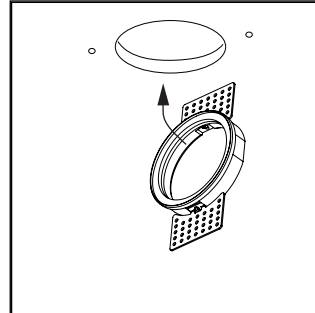


3. Insert installation kit into cutout

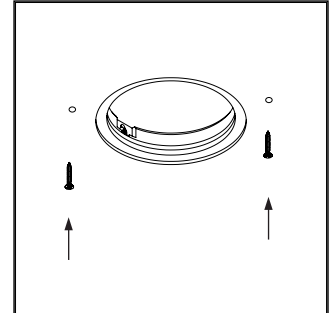


4. Secure kit through ceiling with screws

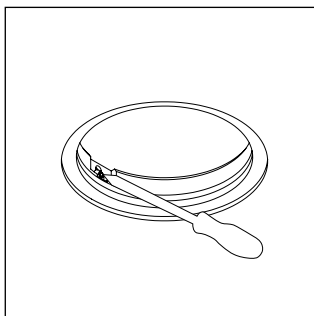


5. Adjust kit position as required

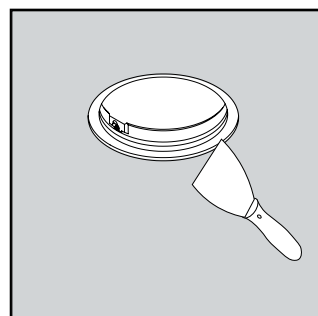


6. Skim around kit and finish ceiling face

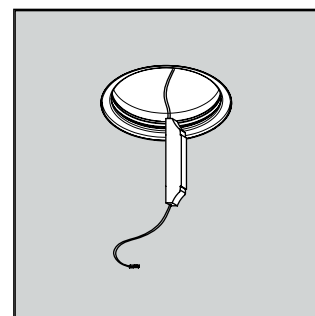


7. LED driver dropdown

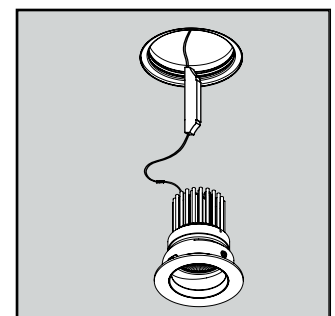


8. Fixture wiring connection

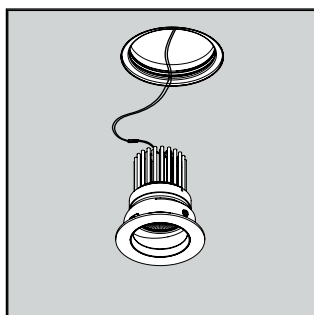


9. LED Driver re-installation

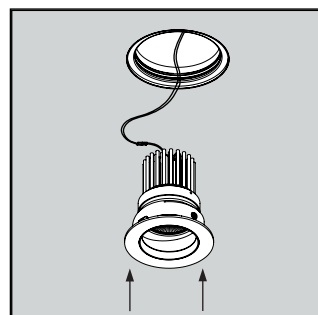

10. Insert luminaire module body and ensure ball-catches are fully engaged

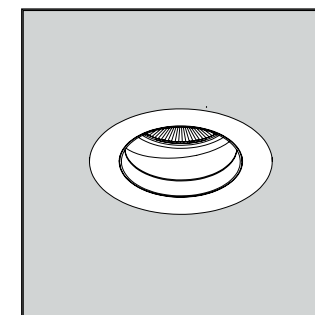

11. Adjust fitting as desired

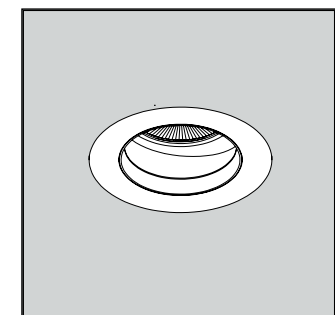


12. Finished Installation

Installation Steps




TURN POWER OFF BEFORE INSPECTION, INSTALLATION OR REMOVAL AND PROPERLY GROUND ELECTRICAL ENCLOSURE!


Mix85 Trimless TL3 Solid Ceiling Installation

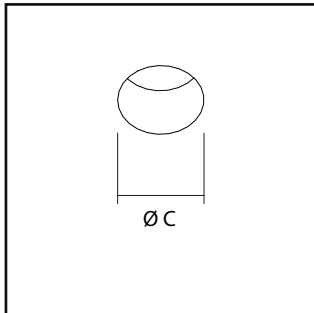


1. Create cutout C=Ø86mm

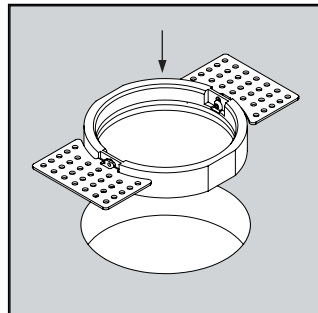


2. Insert installation kit into cutout

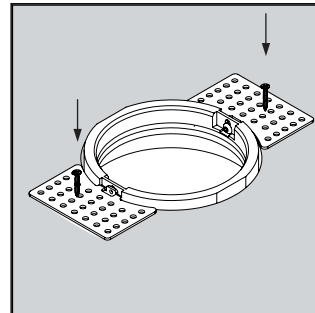


3. Secure kit to rear of ceiling with screws

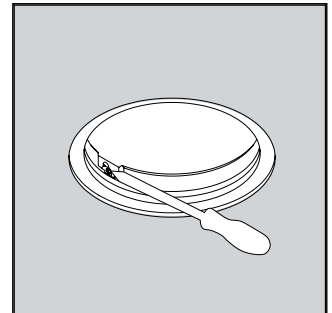


4. Adjust kit position as required

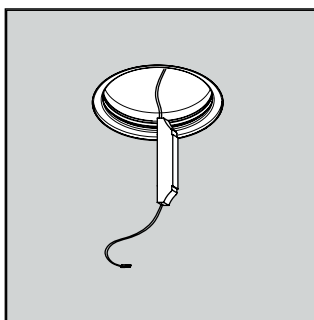


5. LED driver dropdown

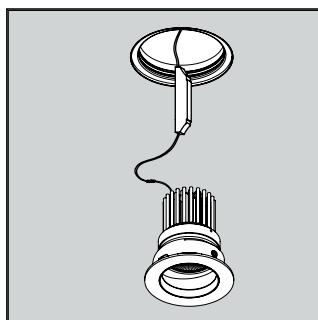


6. Fixture wiring connection

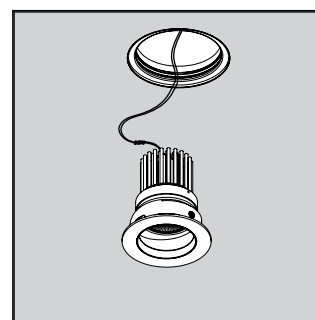


7. LED Driver re-installation

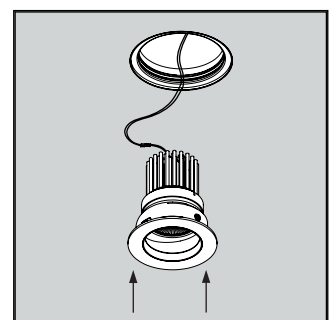

8. Insert luminaires module body and ensure ball-catches are fully engaged

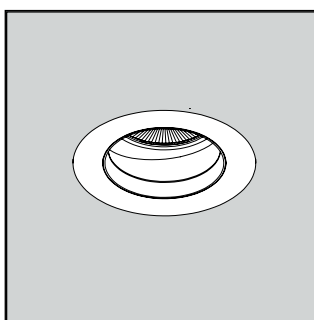


9. Adjust fitting as desired

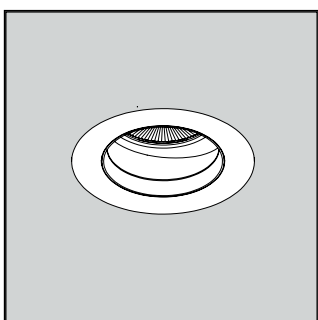


10. Finished Installation

Bracket Spacing for Partial Skim TL2 and Solid Ceiling TL3 Kits

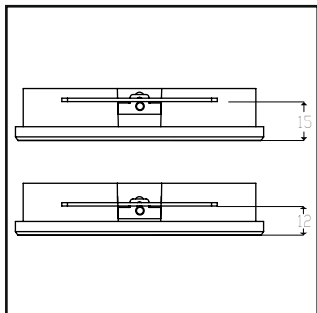


Single Thickness Bracket: Ceiling Thickness from 12 mm to 15 mm

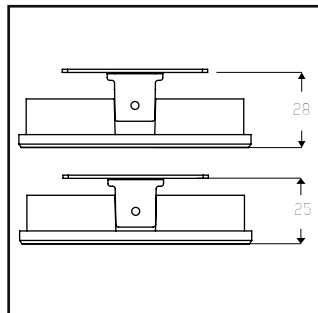


Double Thickness Bracket: Ceiling Thickness from 25 mm to 28 mm

Note: Ceiling thicknesses 15-25mm can be accommodated by using the double thickness ceiling brackets and installing a pattrass of the correct thickness behind the ceiling.

Remote Driver Wiring

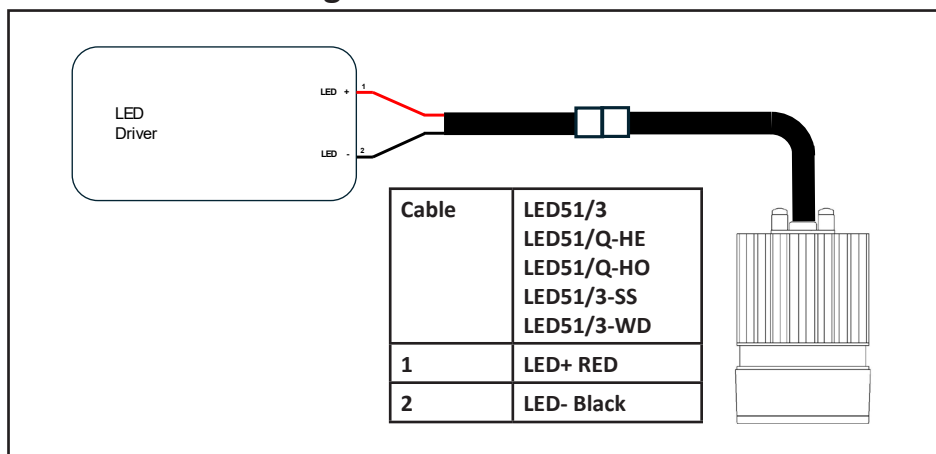

Tuneable White Remote Driver Wiring

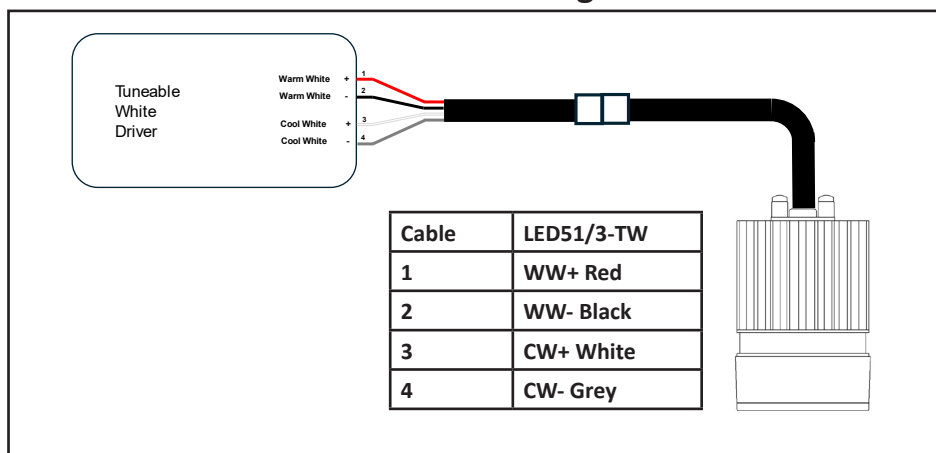


ALL LED DRIVERS SUPPLIED BY LUCENT WILL BE PRE-WIRED WITH A LEAD THAT HAS THE CORRECT CONNECTOR TO MATCH THE LED MODULE USED. IF CONNECTORS ARE REMOVED, WARRANTY WILL BE VOID. IF THE DRIVER NEEDS TO BE REPLACED, OR CABLES EXTENDED REFER TO FOLLOWING WIRING DIAGRAMS.




TURN POWER OFF BEFORE INSPECTION, INSTALLATION OR REMOVAL AND PROPERLY GROUND ELECTRICAL ENCLOSURE!

⚠ Servicing LED modules


LUCENT LED MODULES ARE **NON-USER** REPLACEABLE. LED MODULES SHOULD ONLY BE REPLACED BY A QUALIFIED PERSON, THE MANUFACTURER OR A SIMILAR QUALIFIED PERSON.

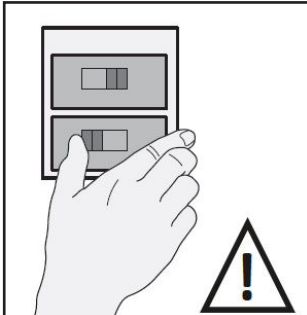


1. Switch off mains power.

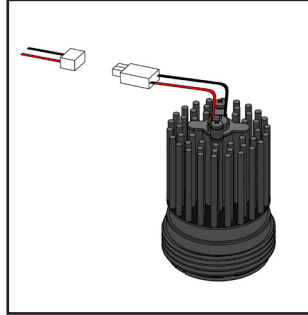

2. Disconnect LED module from the driver.

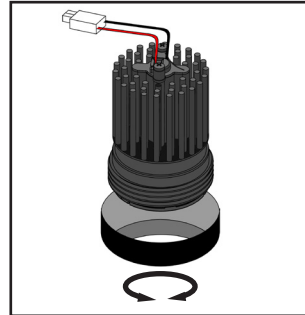

3. Turn the LED module anticlockwise to release it, then remove it.

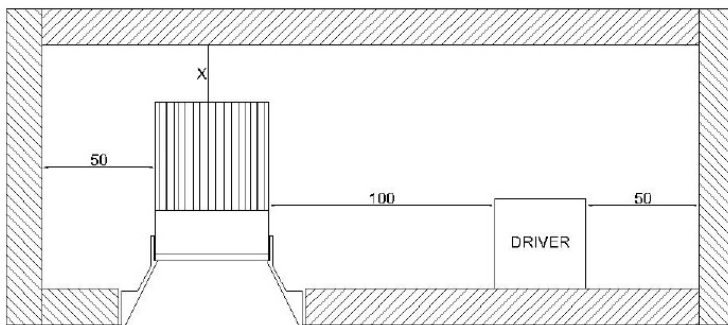

NOTES:

Leave the minimum distance detailed above around the luminaire and driver:

For LED35 modules X= min. 15mm

For LED51 modules X= min. 25mm

For LED71 modules X= min. 25mm

*some driver and fitting combinations may require a bigger recess depth to install driver



TURN POWER OFF BEFORE INSPECTION, INSTALLATION OR REMOVAL AND PROPERLY GROUND ELECTRICAL ENCLOSURE!