



Installation Instructions Focus Multiple Trimless.


Trimless Kit Installation.



Cut hole as follows:	
1 Lamp	87 x 87mm
2 Lamp	207 x 87mm
3 Lamp	307x87mm

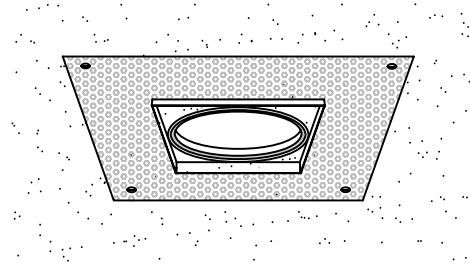

Fit the PC installation trim into the hole, square up trim as required and fix the mesh plate to plasterboard with screws. *(Recommended - for additional strength bond ring into the hole).*

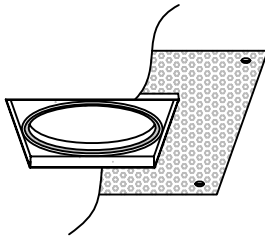


Skim plaster to the lip edge of the plaster ring.
Make good and paint ceiling before installing luminaire body.




Installation kit is now ready for final installation.


Refer to instructions supplied with the transformer/control gear for connection details

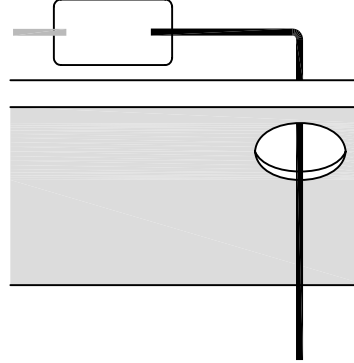

Install control gear/transformer through the ceiling cut-out/installation kit. Wire equipment according to the installation instructions provided/printed on the equipment to the terminal block mounted on fixtures arm.

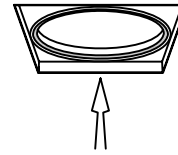

Insert any lenses/louvres into the lamp/accessory holder. then install the lamp. Lamp retaining springs will hold everything in place.

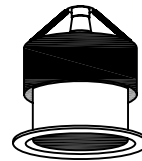


Drawing simplified for clarity.

The luminaire body can then be installed into the ceiling kit. The assembly is held in position by magnets.

Re-lamping is the reverse of the above.



Installation is complete.

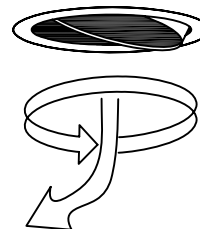

Adjustable versions can be aimed. Luminaire body can be rotated with the ceiling trim & central tube tilted to suit.