


Installation Instructions


For Flare55 Trim




MAINS POWER TO BE SWITCHED OFF DURING INSTALLATION.

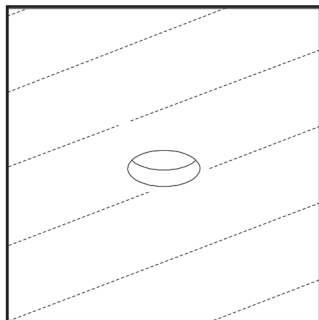


1. Cutout Ø48mm

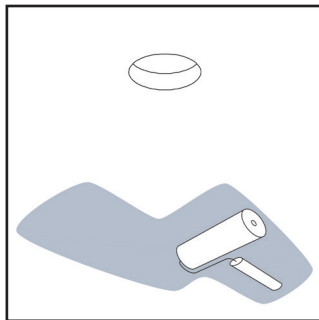


2. Finish ceiling

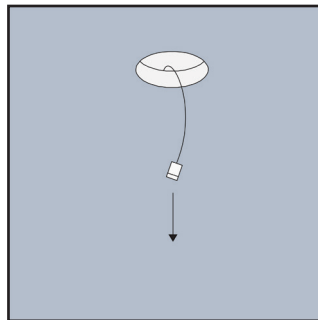


3. Dropdown of power supply connector

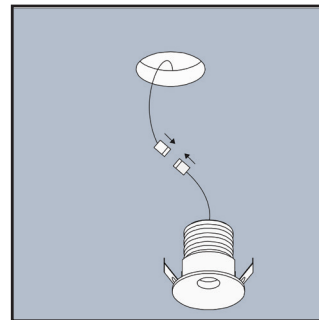

4. Fixture wiring connection

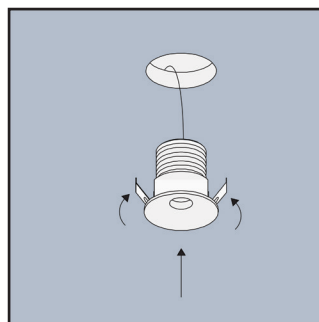

5. Press springs towards luminaire body and insert into ceiling cutout

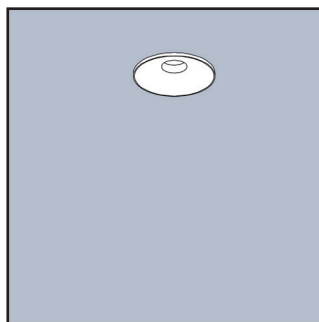

6. Finished installation

Note:


Driver may need to be installed remotely depending on if will not install through the installation kit. Refer to the driver manufacturers information for maximum cable runs and cable size.

Installation Instructions


For Flare55 Trimless




**MAINS POWER TO BE SWITCHED OFF
DURING INSTALLATION.**

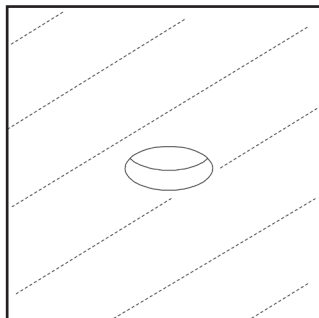


1. Cutout Ø53mm

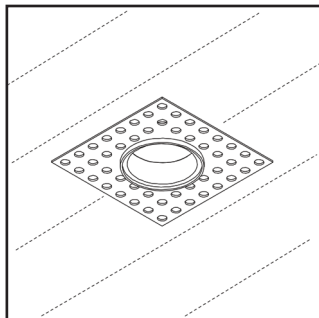


2. Trimless plaster in kit installation

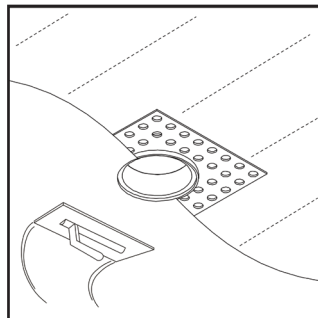


3. Plaster in and allow to dry fully

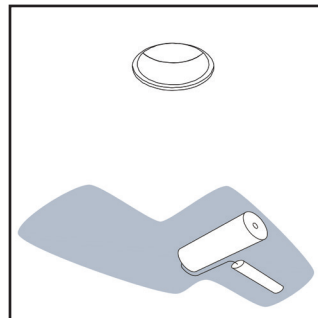


4. Paint and allow to dry fully

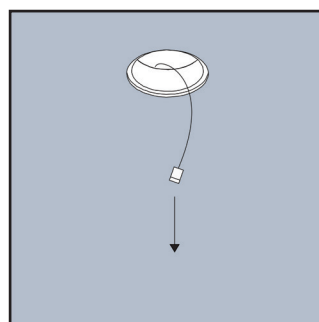


5. Dropdown of power supply connector

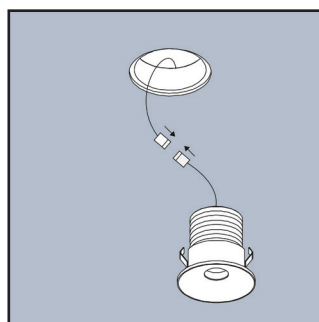

6. Fixture wiring connection

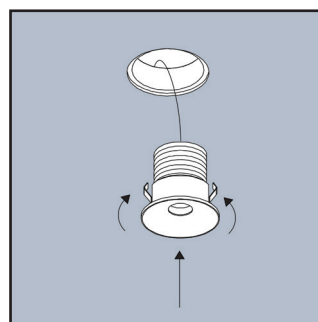

7. Press springs towards luminaire body and insert into mud in kit

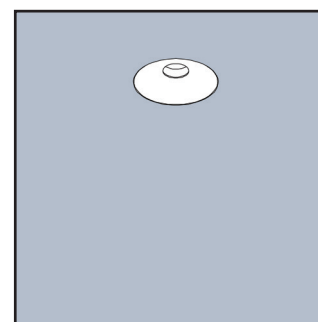

8. Finished installation

Note:

Driver may need to be installed remotely depending on if will not install through the installation kit. Refer to the driver manufacturers information for maximum cable runs and cable size.