


## Installation Instructions


For Soft Square50 Trimless




**MAINS POWER TO BE SWITCHED OFF DURING INSTALLATION.**

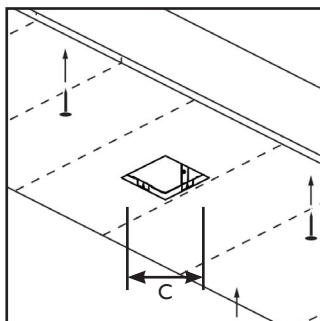


1. Cutout (C): 61 x 61mm

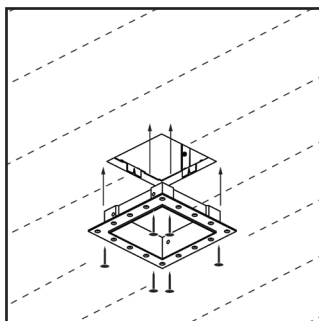


2. Trimless plaster in kit installation

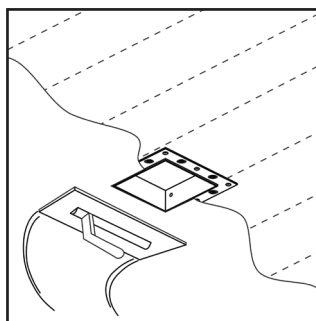


3. Plaster in and allow to dry fully

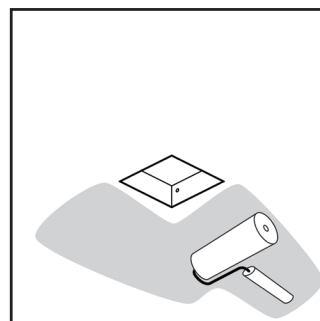


4. Paint and allow to dry fully

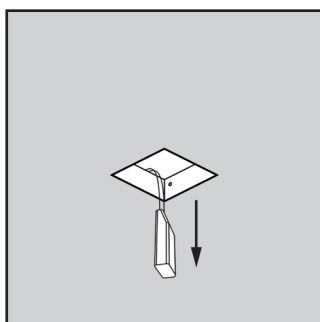

5. Dropdown of power supply

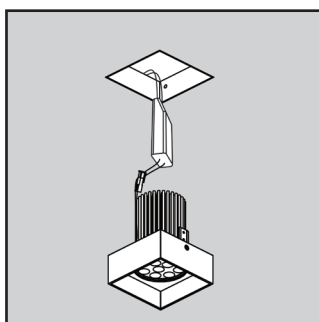


6. Fixture wiring connection

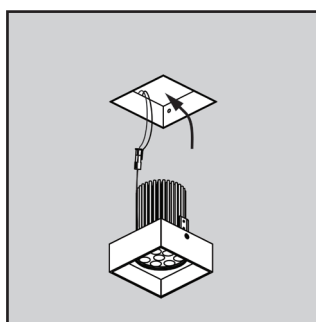


7. Power supply re-installation

### Note:

Driver may need to be installed remotely depending on if will not install through the installation kit. Refer to the driver manufacturers information for maximum cable runs and cable size.

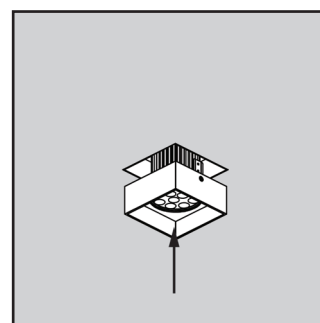

8. Align fixture with trimless kit and Install

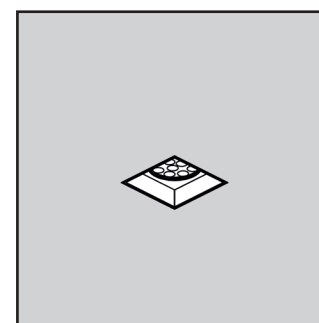

9. Finished Installation