
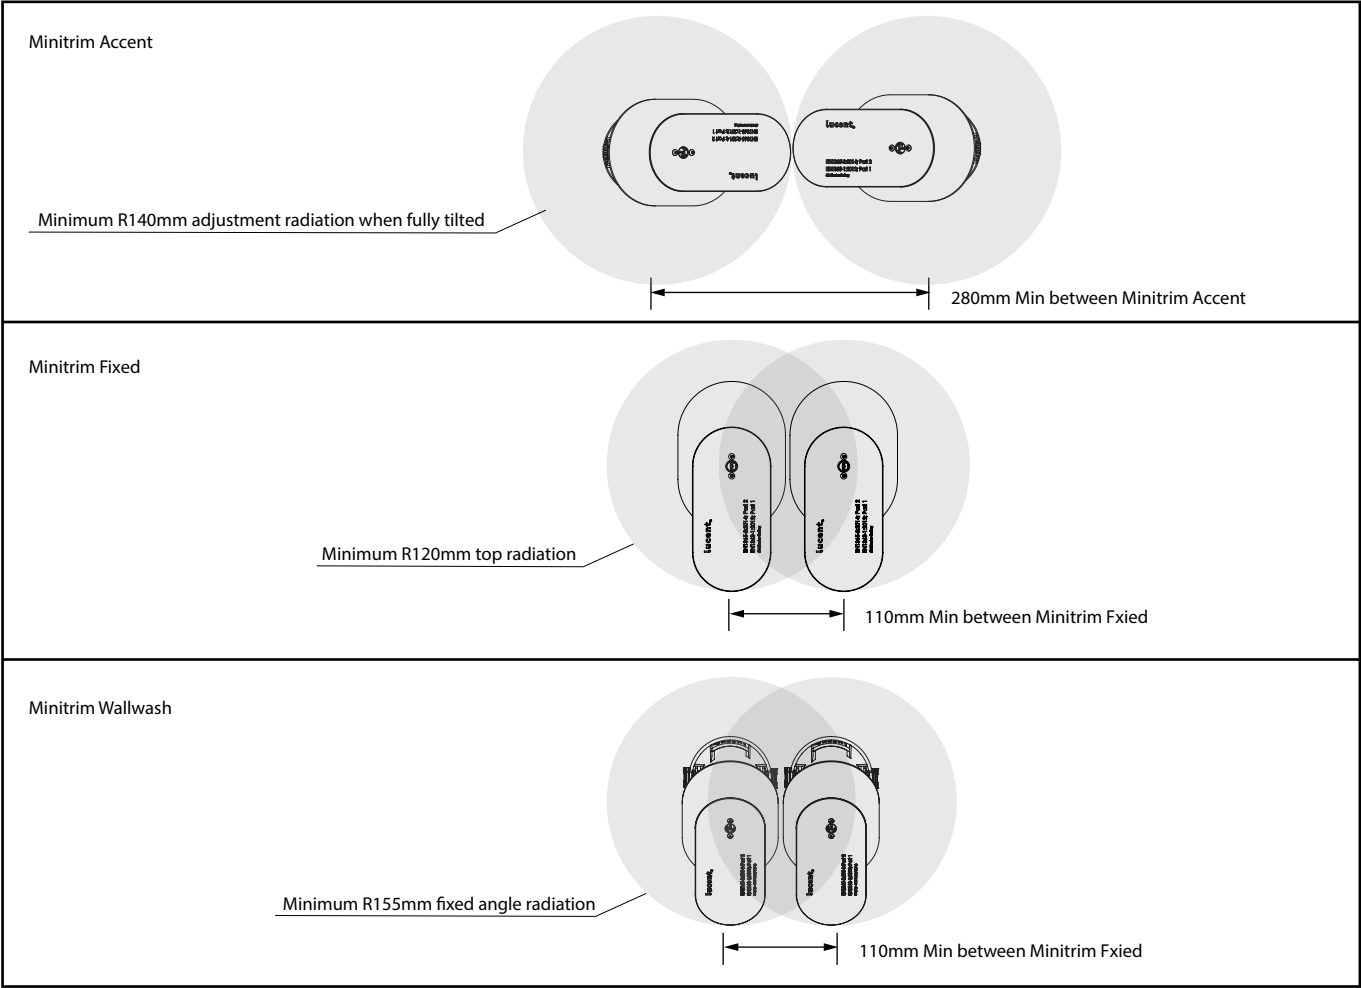


Fire Rated Minitrim Installation Instructions

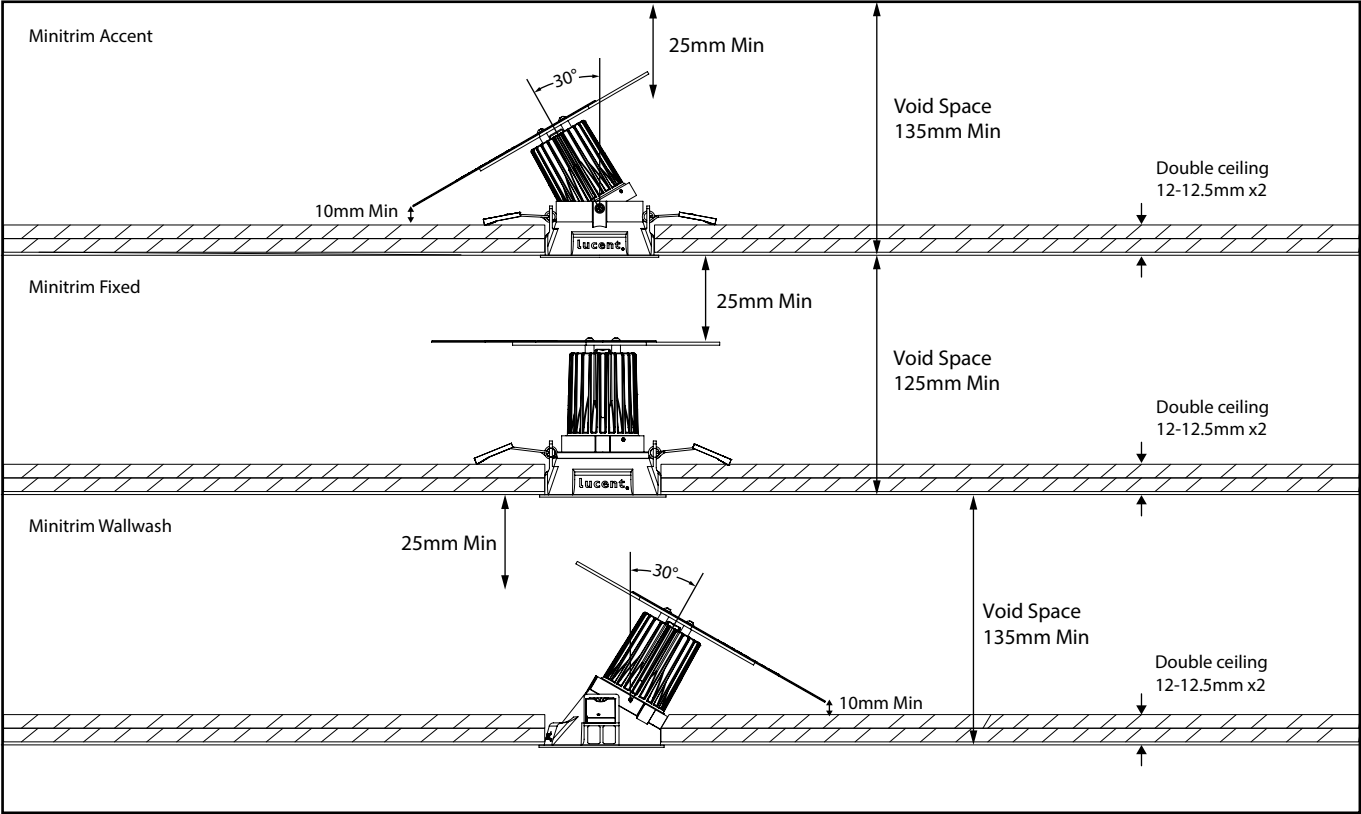


This product range has been tested to the following standards,

EN1365-2:2014; Part 2


EN1363-1:2012; Part 1

EN1363-1 :60MINS

- Please read the following instructions carefully.
- Follow all national and local wiring and safety regulations.
- These products should only be installed by qualified personnel.
- These luminaires require a CC LED driver
DO NOT CONNECT DIRECTLY TO MAINS POWER!
- To prevent damage to the luminaire, only connect products manufactured by Lucent lighting.
- Observe the LED warning label attached to the modules cable. remove label prior to installation (removal of the label implies understanding and acknowledgement of the conditions for installation).
- To prevent damage of the soft intumescent plate, remove / install the fitting carefully and suggested <3 times removals
- Please do not remove the fitted soft intumescent plate from the LED engine, unless it is necessary to replace, for instance, damage replacement.
- Retain these instructions for future reference.

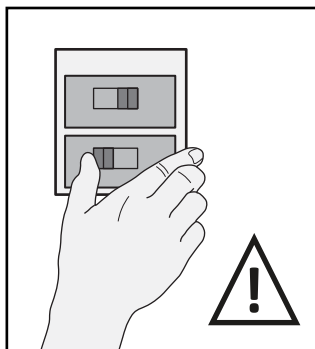


Switch off mains power before installation.

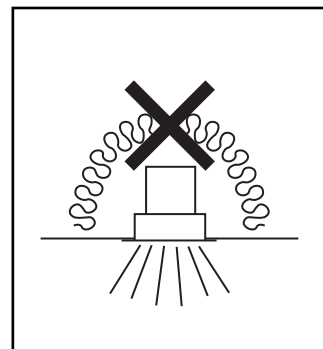


Do not cover luminaires with insulation material.

Fire Rated Minitrim Installation Instructions

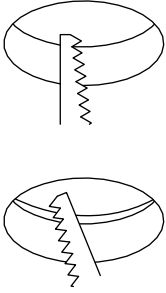


Cut hole as follows:	
Minitrim Fixed	81mmØ
Minitrim Accent	81mmØ
Minitrim Wallwash	81mmØ

Trim the chamfer around the edge above the cut hole for Minitrim Wallwash installation




Refer to instructions supplied with the CC LED driver for connection details


Install LED Drivers through the ceiling cut-out.
Wire Primary and, if required, the dimming control input of the equipment according to the installation instructions provided/printed on the driver.

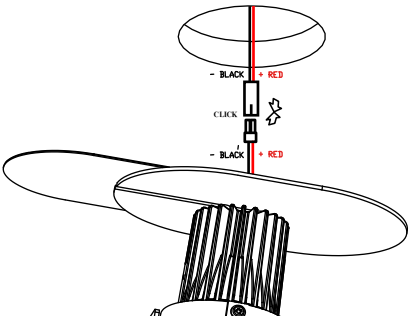


Ensuring the driver is not energised, connect the LED lead to the flying lead from the driver.

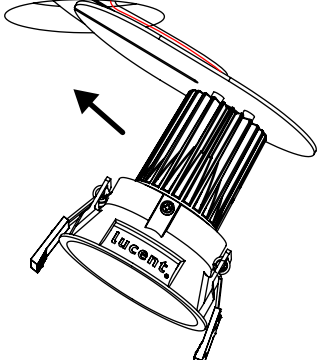


1. Tilt the luminaire body and insert from the steel plate side into the ceiling cut-out hole

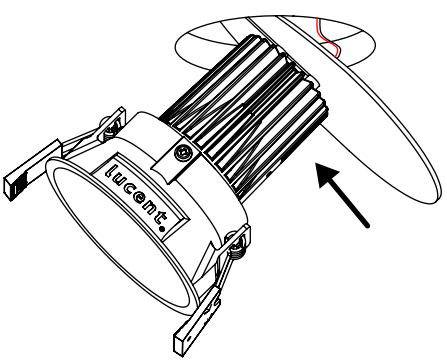

2. Tilt the luminaire body more and slightly insert further with the top steel plate and the intumescent material.

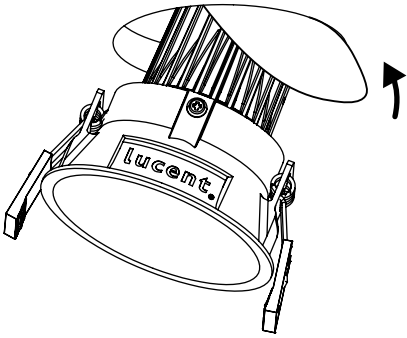


3. Tilt upwards the luminaire body to let the short side of the steel plate pass through the ceiling hole. Then the soft intumescent plate will be bended out of the ceiling hole. Carefully squeeze the intumescent plate back through the ceiling hole until it pass through.

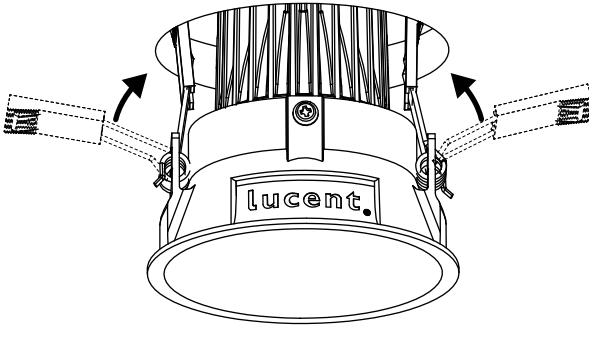

4. Now the top kit should pass through the ceiling hole and in the correct position for fire rating purpose. Then carefully raise the springs to allow the fixture to pass through the ceiling cut-out. Take care to ensure the springs do not close too hard to damage the ceiling.

Fire Rated Minitrim installation:

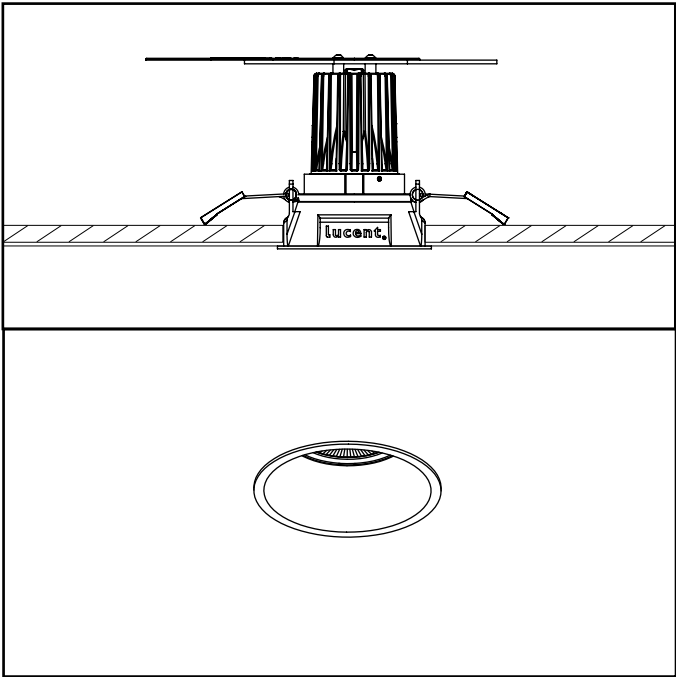


5. Once in position the tension of the springs will hold the luminaire in position. Then the fire rated Minitrim installation has been completed. The light tilting angle 30°.



• Instructions applicable for the following luminaires:

- ProSpex Minitrim Round Fixed:
860F-LED, 860F-LED-54
- ProSpex Minitrim Accent:
863F-LED, 863F-LED-54
- ProSpex Minitrim Accent:
860F-LED-WW, 860F-LED-54

Fire Rated Minitrim maintenance:

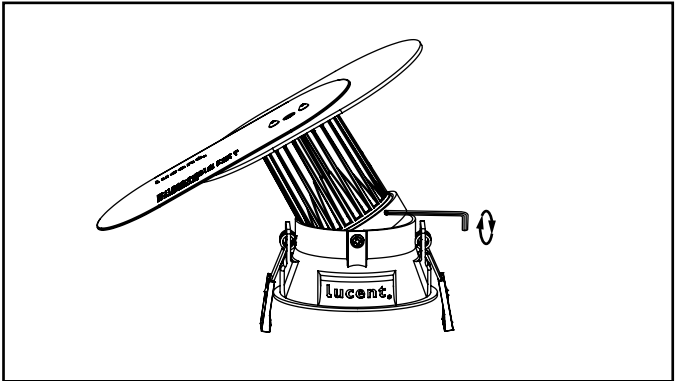

If the module needs to be removed from the fixture, use the Hex Allen Key to uncrew and release two sides grub screws . Then the LED module can be removed. Reverse for re-assembly. (with Minitrim Accent, slightly tilt the bezel to expose the screw holes.)

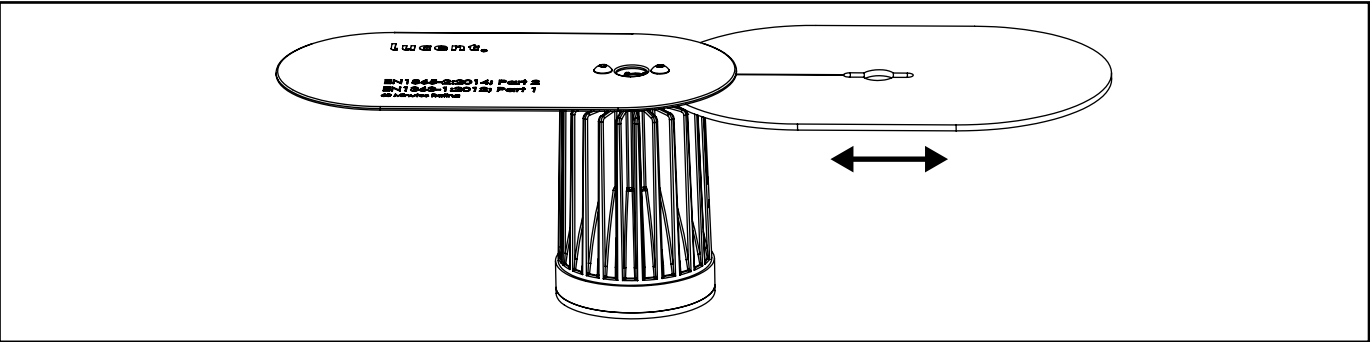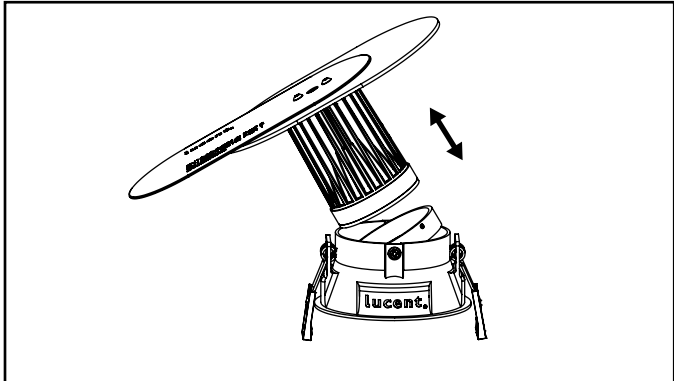

The fire prevention intumescent material plate normally be factory fitted on the top of the LED module. However if the intumescent plate needs to be replaced, slide the intumescent plate through the slot along the screws. until it is tightly fitted. Do not over push. Reverse for removal.