


## Installation Instructions for 4.25" Pinhole Flangeless with Housing


For Insulated and Non-Insulated Ceiling type installations




**MAINS POWER TO BE SWITCHED OFF DURING INSTALLATION.**

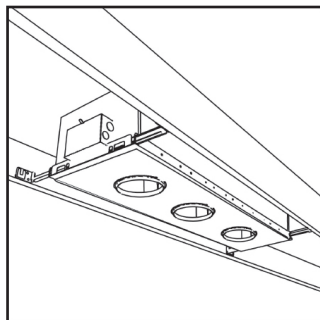


1. Fixing of housing

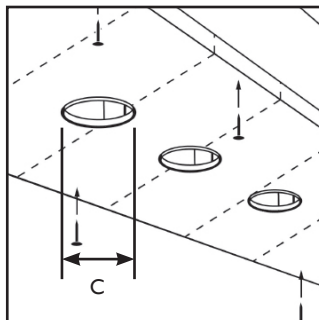


2. Plasterboard installation  
Cutout (C): Ø3.85" (98mm)

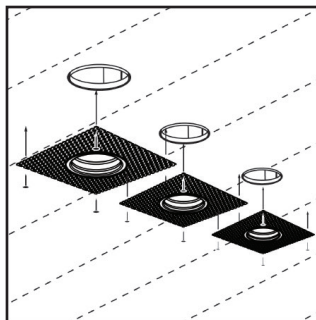


3. Trimless mud in kit installation

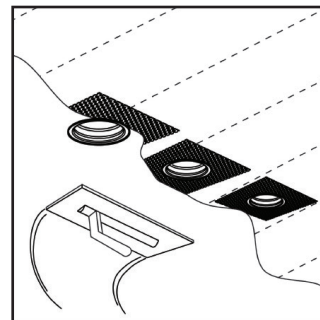


4. Mud in and allow to dry fully

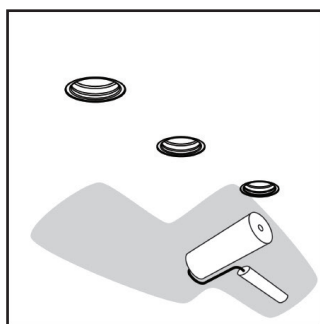


5. Paint and allow to dry fully

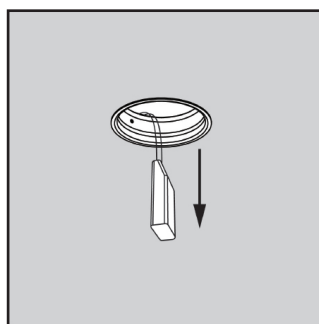


6. Dropdown of power supply

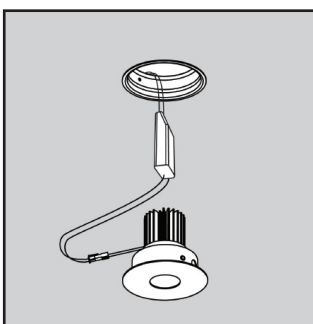


7. Fixture wiring connection

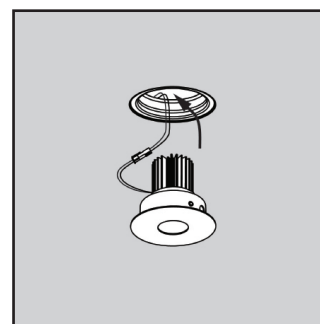

8. Power supply re-installation

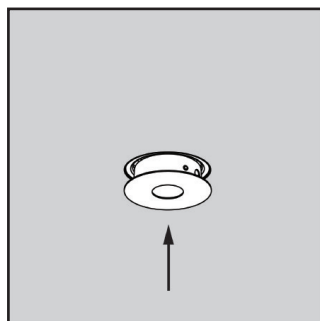


9. Align fixture with trimless kit and install

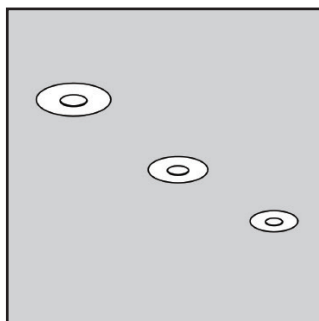


10. Finished installation

## Fixture Adjustment Instructions

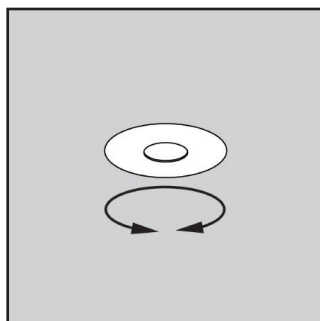

1. Adjust rotation

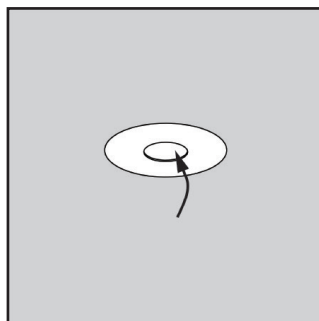


2. Adjust tilt

## Installation Instructions for 4.25" Pinhole Flangeless with Tray


For Insulated and Non-Insulated Ceiling type installations




**MAINS POWER TO BE SWITCHED OFF DURING INSTALLATION.**

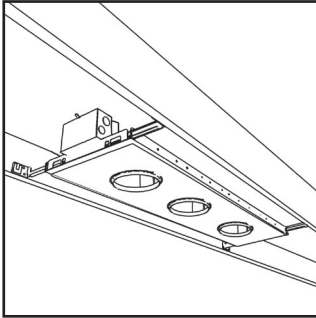


1. Fixing of housing

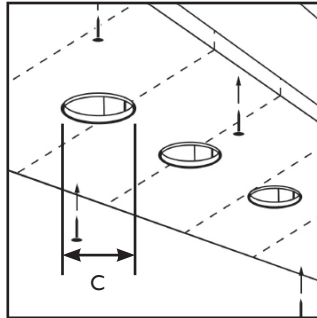


2. Plasterboard installation  
Cutout (C): Ø3.85" (98mm)

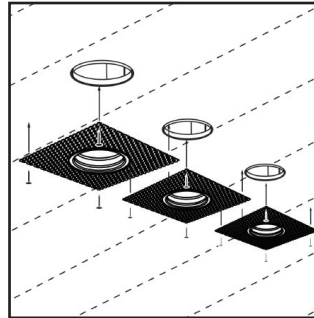


3. Trimless mud in kit installation

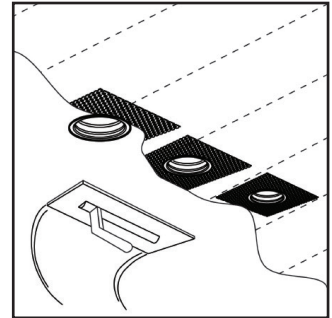


4. Mud in and allow to dry fully

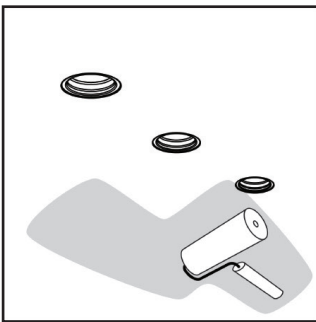


5. Paint and allow to dry fully

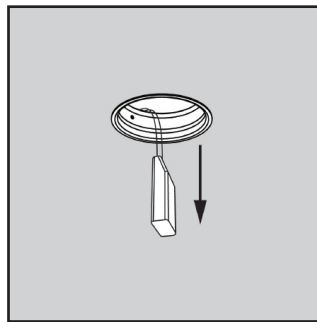


6. Dropdown of power supply

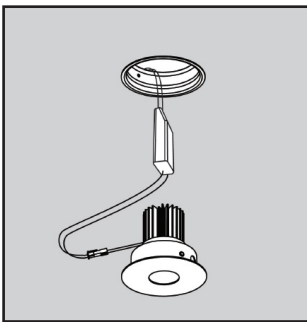


7. Fixture wiring connection

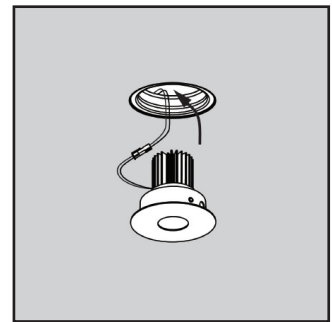

8. Power supply re-installation

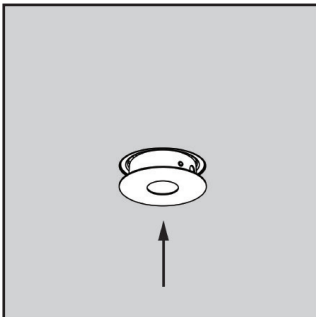


9. Align fixture with trimless kit and install

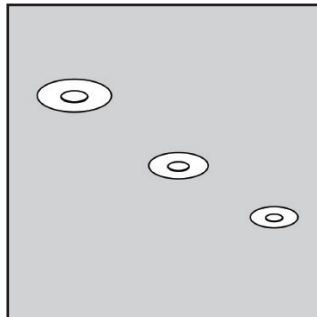


10. Finished installation

## Fixture Adjustment Instructions

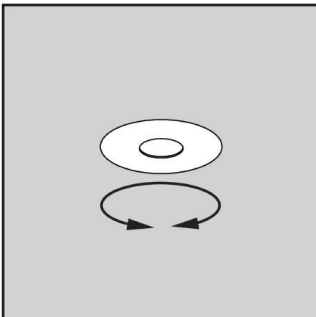

1. Adjust rotation

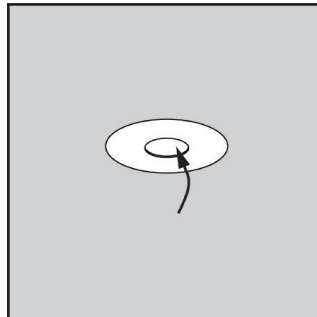

2. Adjust tilt